

# Crawlbrella Door Installation Instructions

**Before installing your new door:** Please read through the entire installation process. It will help you to understand and install your door properly.

**Tools required:** Hammer Drill, 5/16" Masonry Drill Bit, Phillips Bit or Screwdriver, Marker (Sharpie)

**Parts included:** (4) 1-1/2 Screws (4) Plastic Anchors

---

To remove the door: Turn the top latch right or left, tilt the door forward and lift up (see #2).

\*\*The top latch is padlockable

## Installing the door:

Center the frame in your opening, using your marker, mark through the four pre-drilled holes in the aluminum frame onto the surface of your concrete blocks (see #1).

Remove the frame and drill four 5/16" holes approximately 1-1/2" deep on your marked locations.


Insert the plastic anchors into the holes.

Insert the frame into the opening and secure with the four 1-1/2" screws.

We recommend using a mortar caulking or similar material to fill in any gaps between the aluminum frame and the concrete block opening.



#1

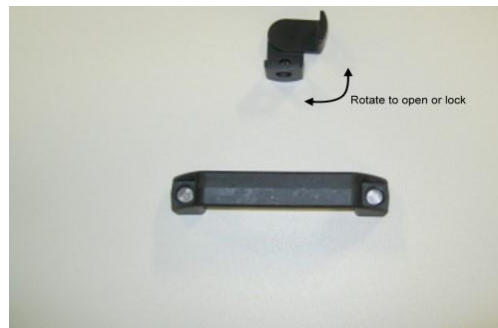

#2